

Vehicle Identif Number	Series	Recall Text
WBADL82020CA99388	E39	Checking the driver's airbag, replacing if necessary
WBADN12060BM10132	E39	Checking the driver's airbag, replacing if necessary
WBADN22000GE69706	E39	Checking the driver's airbag, replacing if necessary
WBADN22000GE69740	E39	Checking the driver's airbag, replacing if necessary
WBADN22000GE69883	E39	Checking the driver's airbag, replacing if necessary
WBADN22000GE69978	E39	Checking the driver's airbag, replacing if necessary
WBADN22000GE69981	E39	Checking the driver's airbag, replacing if necessary
WBADN22000GE69995	E39	Checking the driver's airbag, replacing if necessary
WBADN22000GE70015	E39	Checking the driver's airbag, replacing if necessary
WBADN22000GE70063	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE69665	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE69701	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE69763	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE69777	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE69794	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE69813	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE69830	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE69875	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE70038	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE70041	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE70086	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE70119	E39	Checking the driver's airbag, replacing if necessary
WBADN22010GE70122	E39	Checking the driver's airbag, replacing if necessary
WBADN22020GE69707	E39	Checking the driver's airbag, replacing if necessary
WBADN22020GE69710	E39	Checking the driver's airbag, replacing if necessary
WBADN22020GE69738	E39	Checking the driver's airbag, replacing if necessary
WBADN22020GE69769	E39	Checking the driver's airbag, replacing if necessary
WBADN22020GE69819	E39	Checking the driver's airbag, replacing if necessary
WBADN22020GE69982	E39	Checking the driver's airbag, replacing if necessary
WBADN22020GE70064	E39	Checking the driver's airbag, replacing if necessary
WBADN22030GE69683	E39	Checking the driver's airbag, replacing if necessary
WBADN22030GE69702	E39	Checking the driver's airbag, replacing if necessary
WBADN22030GE69716	E39	Checking the driver's airbag, replacing if necessary
WBADN22030GE69747	E39	Checking the driver's airbag, replacing if necessary
WBADN22030GE69778	E39	Checking the driver's airbag, replacing if necessary
WBADN22030GE69957	E39	Checking the driver's airbag, replacing if necessary
WBADN22030GE69960	E39	Checking the driver's airbag, replacing if necessary
WBADN22030GE69988	E39	Checking the driver's airbag, replacing if necessary
WBADN22030GE70011	E39	Checking the driver's airbag, replacing if necessary
WBADN22030GE70087	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69689	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69692	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69708	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69711	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69742	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69773	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69787	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69790	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69918	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69952	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE69983	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE70034	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE70048	E39	Checking the driver's airbag, replacing if necessary
WBADN22040GE70051	E39	Checking the driver's airbag, replacing if necessary
WBADN22050GE69720	E39	Checking the driver's airbag, replacing if necessary





































































































































WBAFB320X0LN87287	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN87421	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN87435	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN87452	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN87936	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN88052	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN88083	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN88097	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN88391	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN88441	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN88908	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN89184	E53	Checking the driver's airbag, replacing if necessary
WBAFB320X0LN89279	E53	Checking the driver's airbag, replacing if necessary
WBAFB52020LT79013	E53	Checking the driver's airbag, replacing if necessary
WBAFB52040LT79014	E53	Checking the driver's airbag, replacing if necessary
WBSDE92000BJ11441	E39	Checking the driver's airbag, replacing if necessary
WBSDE92000BJ11701	E39	Checking the driver's airbag, replacing if necessary
WBSDE92010BJ11285	E39	Checking the driver's airbag, replacing if necessary
WBSDE92020BJ11330	E39	Checking the driver's airbag, replacing if necessary
WBSDE92040BJ11281	E39	Checking the driver's airbag, replacing if necessary
WBSDE92050BJ11564	E39	Checking the driver's airbag, replacing if necessary
WBSDE92060BJ11329	E39	Checking the driver's airbag, replacing if necessary
WBSDE92060BJ11671	E39	Checking the driver's airbag, replacing if necessary
WBSDE92060BJ11833	E39	Checking the driver's airbag, replacing if necessary
WBSDE92060BJ11878	E39	Checking the driver's airbag, replacing if necessary
WBSDE92080BJ11672	E39	Checking the driver's airbag, replacing if necessary
WBSDE92090BJ11454	E39	Checking the driver's airbag, replacing if necessary
WBSDE92090BJ11728	E39	Checking the driver's airbag, replacing if necessary
WBSDE92090BJ11812	E39	Checking the driver's airbag, replacing if necessary
WBSDE920X0BJ11320	E39	Checking the driver's airbag, replacing if necessary
WBSDE920X0BJ11771	E39	Checking the driver's airbag, replacing if necessary
WBSDE920X0BJ11950	E39	Checking the driver's airbag, replacing if necessary